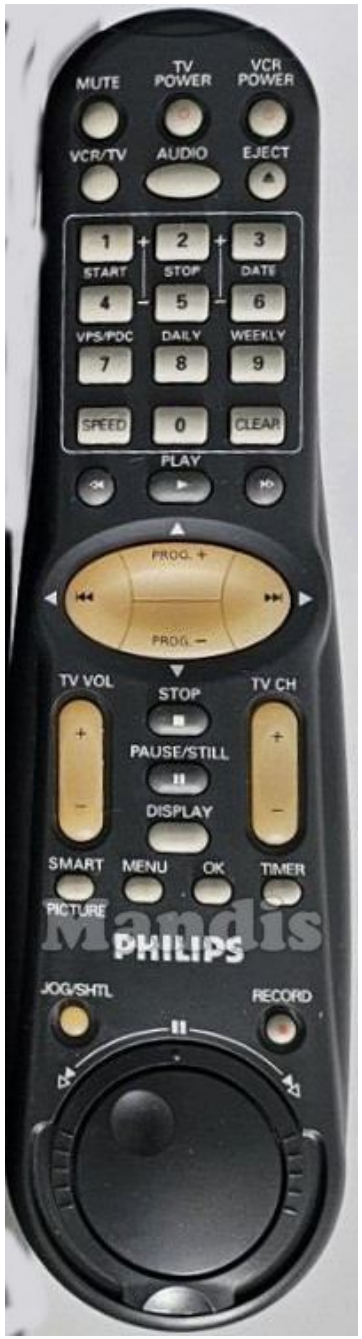

Original		Replacement	
VCR POWER	Power		Power
VCR/TV	VCR/TV	PROGRAM TV/RADIO	TV/Radio /
AUDIO	Audio	DIMMER MUTE	Mute / Dimmer
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
SPEED	Speed	MEDIA DISPLAY	Display / Media
0	0	HDMI - SAT 0	0
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
<<	<<	TUNE-	<< / Tune-
PLAY	Play	SLOW	Play / Slow

Original		Replacement	
>>	>>	TUNE+	>> / Tune+
PROG. +	Up / Prog+	CH PAGE +	CH+ / Page+
PROG. +	Up / Prog+		Up
	Right / >>I	PRESET+	>>I / Preset+
	Right / >>I		Right
	Left / I<<	PRESET-	I<< / Preset-
	Left / I<<		Left
PROG. –	Down / Prog-	CH PAGE –	CH- / Page-
PROG. –	Down / Prog-		Down
STOP	Stop	HOLD	Stop / Hold
PAUSE/STILL	Pause / Still	STEP - FREEZE	Pause / Step / Freeze
SMART PICTURE	Smart Picture	FORMAT PICTURE	Picture / Format
MENU	Menu	HOME MENU	Menu / Home
OK	OK	OK	OK
TIMER	Timer	TIMER SLEEP	Sleep / Timer
RECORD	Record	REC MODE	Rec / Rec Mode