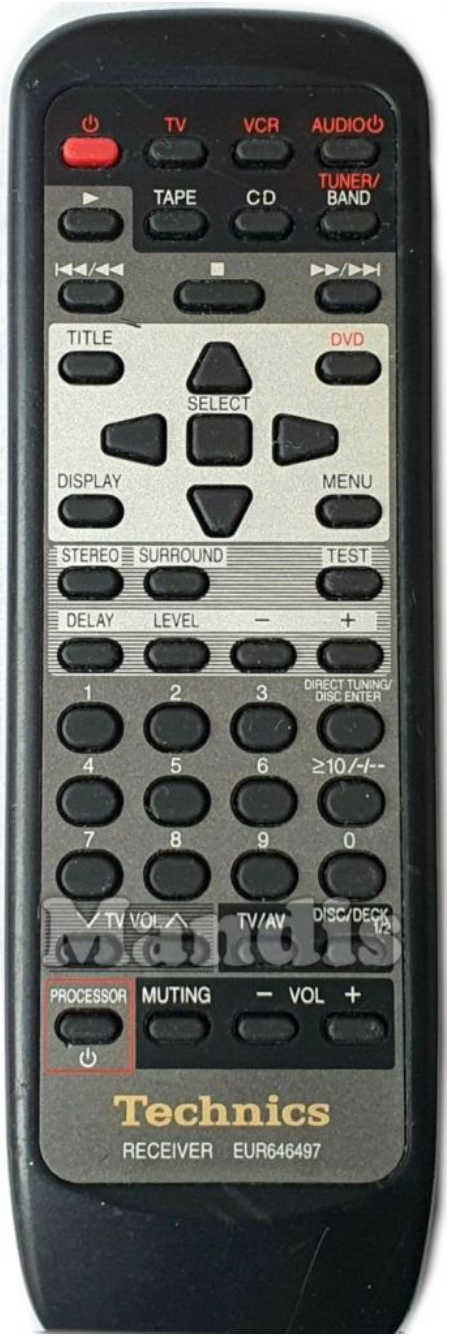

Original		Replacement	
	Power TV		Power
TV	TV	SHIFT + 1	Shift + 1
VCR	VCR	SHIFT + 4	Shift + 4
TAPE	Tape	SHIFT + 5	Shift + 5
CD	CD	SHIFT + 3	Shift + 3
TUNER/ BAND	Tuner / Band	SHIFT + 6	Shift + 6
	Up		Up
DVD	DVD	SHIFT + 2	Shift + 2
	Left		Left
SELECT	Select	OK	OK
	Right		Right
DISPLAY	Display	MEDIA DISPLAY	Display / Media
	Down		Down
MENU	Menu	HOME MENU	Menu / Home
STEREO	Stereo	LANG I/II AUDIO	Audio / Lang I/II
SURROUND	Surround	SURROUND	Eject / Surround
TEST	Test	GOTO TEXT	Text / Goto

Original		Replacement	
DELAY	Delay	RETURN BACK	Back / Return
LEVEL	Level	LIST SMART	Smart / List
–	-	CH PAGE –	CH- / Page-
+	+	+ CH PAGE	CH+ / Page+
1	1 Tv	TV 1	1
2	2 Tv	DVD 2	2
3	3 Tv	CD-STB 3	3
4	4 Tv	VIDEO 4	4
5	5 Tv	TAPE 5	5
6	6 Tv	TUNER 6	6
≥10/-/--	>10/-/-- Tv	-/-- GUIDE EPG	Guide / EPG / -/--
7	7 Tv	AUX-HDD 7	7
8	8 Tv	USB 8	8
9	9 Tv	BLUETOOTH 9	9
0	0 Tv	HDMI-SAT 0	0
TV VOL	Tv Vol Down	SHIFT + VOL –	Shift + Vol -
VOL	Tv Vol Up	SHIFT + VOL +	Shift + Vol +

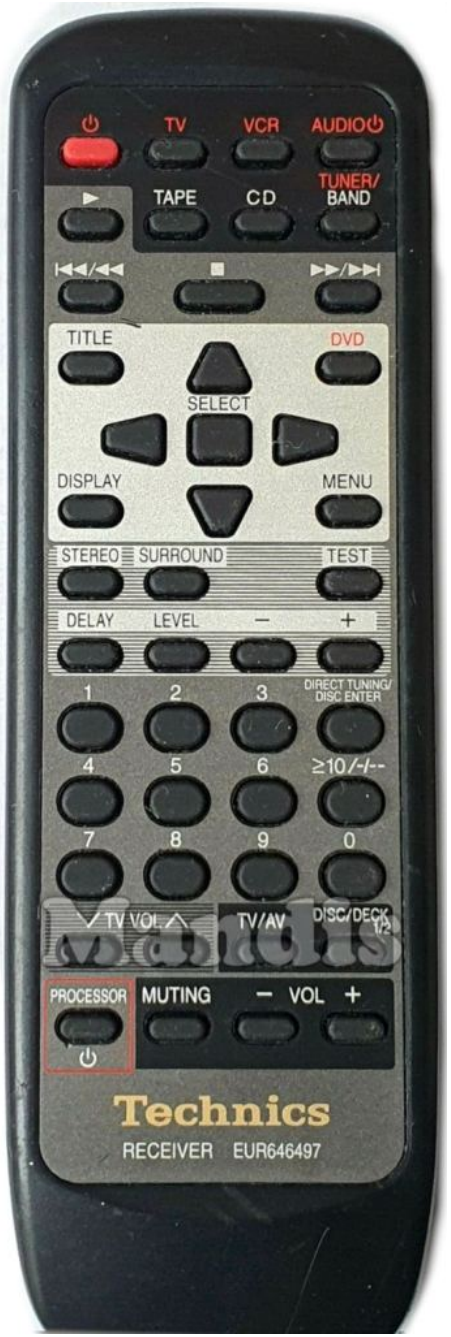

Original		Replacement		Original	Replacement
TV/AV	Tv/AV	RDS AV INPUT	AV / Input / RDS		
DISC/DECK 1/2	Disc/Deck 1/2	TOP MENU D.MENU	D.Menu / Top		
MUTING	Muting	DIMMER MUTE	Mute / Dimmer		
VOL -	Vol -	VOL -	Vol -		
VOL +	Vol +	VOL +	Vol +		

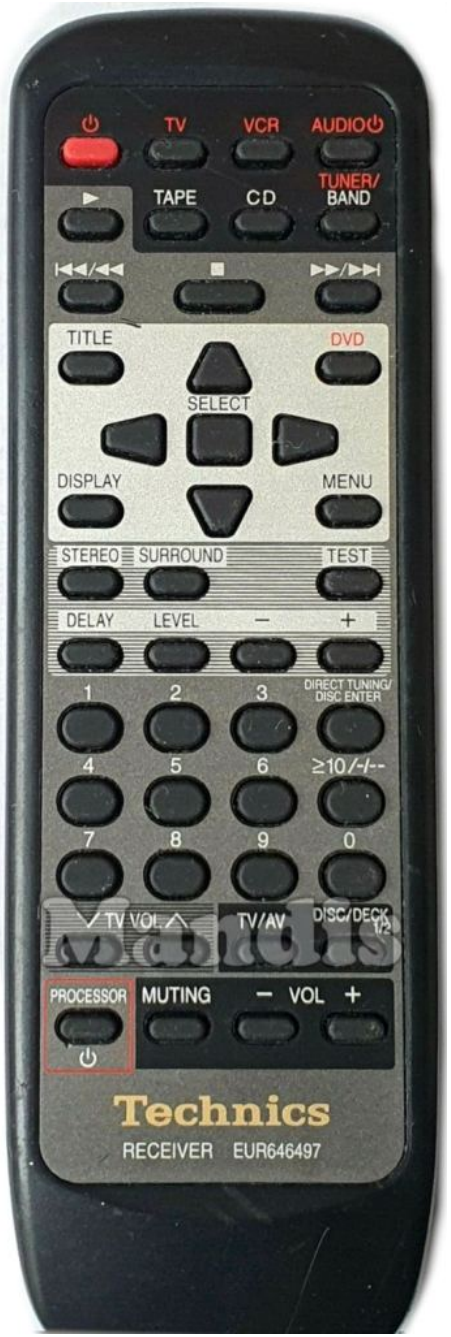

Original		Replacement	
Power DVD		Power	
TV		Shift + 1	SHIFT + TV 1
VCR		Shift + 4	SHIFT + VIDEO 4
Play DVD		Play / Slow	SLOW
Tape		Shift + 5	SHIFT + TAPE 5
CD		Shift + 3	SHIFT + CD - STB 3
Tuner / Band		Shift + 6	SHIFT + TUNER 6
I <<I / << DVD		I << / Preset-	PRESET-
I <<I / << DVD		<< / Tune-	TUNE-
Stop DVD		Stop / Hold	HOLD
>>I / >>I DVD		>> / Tune+	TUNE+
>>I / >>I DVD		>>I / Preset+	PRESET+
Up		Up	
DVD		Shift + 2	SHIFT + DVD 2
Left		Left	
Select		OK	OK
Right		Right	

Original		Replacement	
Display		Display / Media	MEDIA DISPLAY
Down		Down	
Menu		Menu / Home	HOME MENU
Stereo		Audio / Lang I/II	LANG I/II AUDIO
Surround		Eject / Surround	SURROUND
Test		Text / Goto	GOTO TEXT
Delay		Back / Return	RETURN BACK
Level		Smart / List	LIST SMART
-		CH- / Page-	CH PAGE -
+		CH+ / Page+	CH PAGE +
1 DVD		1	TV 1
2 DVD		2	DVD 2
3 DVD		3	CD - STB 3
4 DVD		4	VIDEO 4
5 DVD		5	TAPE 5
6 DVD		6	TUNER 6
>10/-/-- DVD		Guide / EPG / -/--	-/-- GUIDE EPG

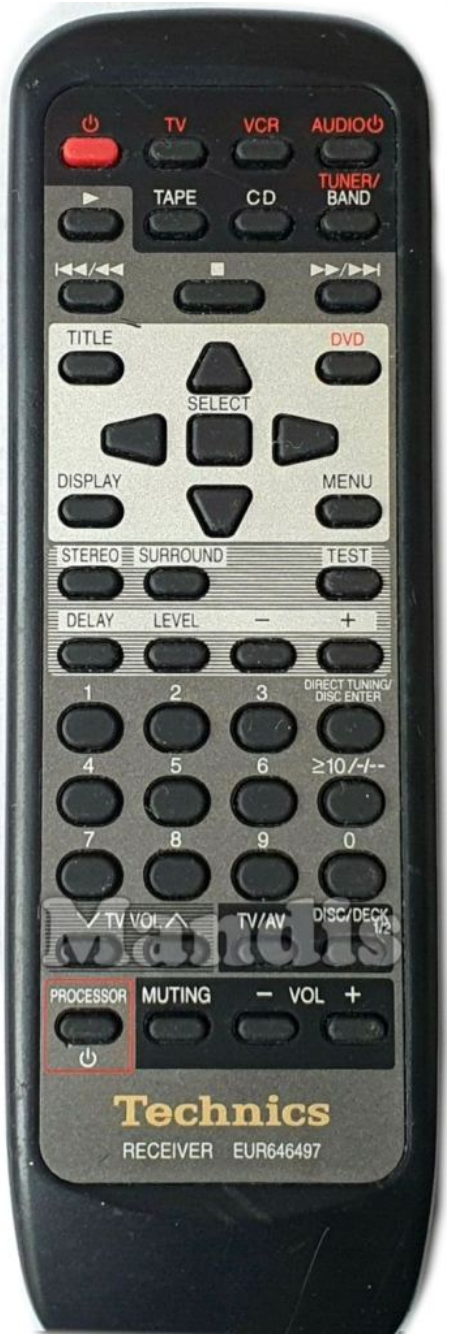

Original		Replacement		Original		Replacement	
7	7 DVD	AUX - HDD 7	7				
8	8 DVD	USB 8	8				
9	9 DVD	BLUETOOTH 9	9				
0	0 DVD	HDMI - SAT 0	0				
DISC/DECK 1/2	Disc/Deck 1/2	TOP MENU D.MENU	D.Menu / Top				
MUTING	Muting	DIMMER MUTE	Mute / Dimmer				
− VOL	Vol -	VOL −	Vol -				
VOL +	Vol +	+ VOL	Vol +				

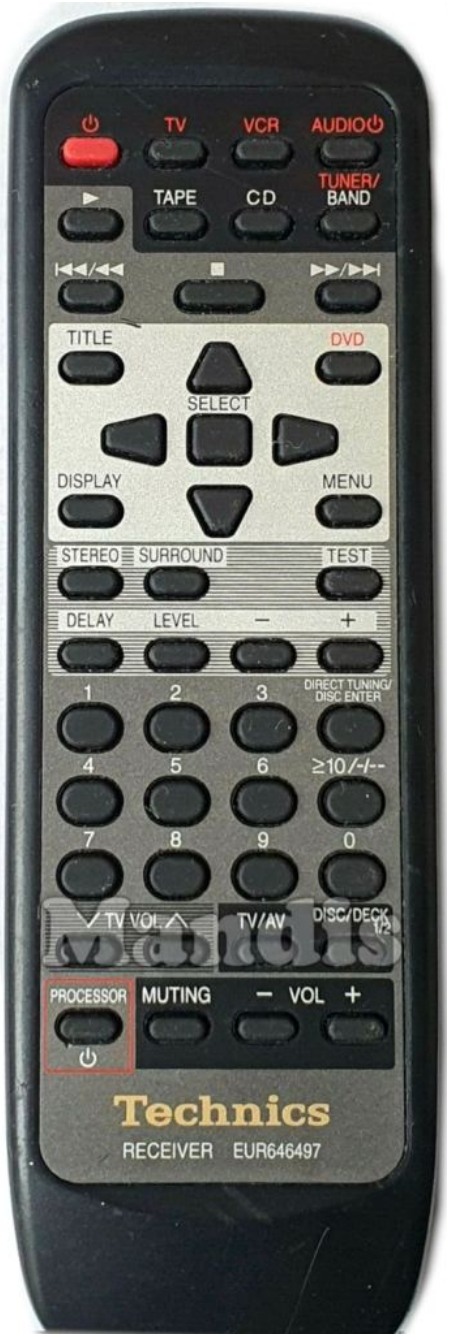

Original	Replacement
Power CD	Power
Power Tape	Shift + Power
TV	Shift + 1
VCR	Shift + 4
Play CD	Play / Slow
Play Tape	Shift + Play /
Tape	Shift + 5
CD	Shift + 3
Tuner / Band	Shift + 6
I <</ << CD	<< / Tune-
I <</ << Tape	Shift + I << / Preset-
I <</ << CD	I << / Preset-
I <</ << Tape	Shift + << /
Stop CD	Stop / Hold
Stop Tape	Shift + Stop /
>>/ >>I CD	>> / Tune+
>>/ >>I Tape	Shift + >> / Tune+

Original	Replacement
>>/ >>I CD	>>I / Preset+
>>/ >>I Tape	Shift + >>I / Preset+
Up	Up
DVD	Shift + 2
Left	Left
Select	OK
Right	Right
Display	Display / Media
Down	Down
Menu	Menu / Home
Stereo	Audio / Lang I/II
Surround	Eject / Surround
Test	Text / Goto
Delay	Back / Return
Level	Smart / List
-	CH- / Page-
+	CH+ / Page+

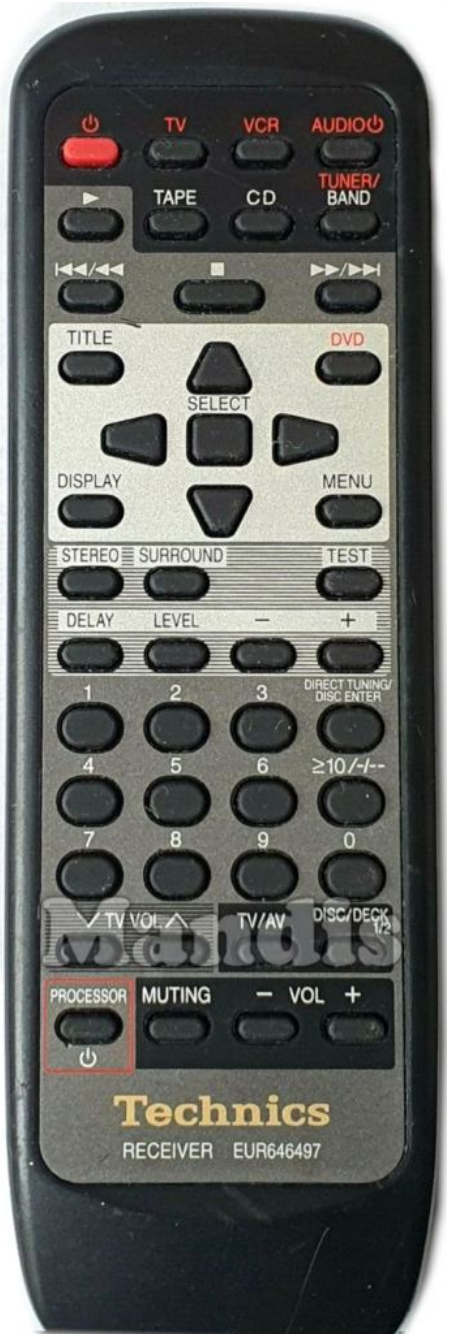

Original		Replacement		Original	Replacement
1	1 CD- Tape	TV 1	1		
2	2 CD- Tape	DVD 2	2		
3	3 CD- Tape	CD - STB 3	3		
DIRECT TUNING/ DISC ENTER	Direct Tuning/ Disc Ente	TOP MENU D.MENU	D. Menu / Top		
4	4 CD- Tape	VIDEO 4	4		
5	5 CD- Tape	TAPE 5	5		
6	6 CD- Tape	TUNER 6	6		
≥10/-/--	>10/ - / -- CD- Tape	-/-- GUIDE EPG	Guide / EPG / -/--		
7	7 CD- Tape	AUX - HDD 7	7		
8	8 CD- Tape	USB 8	8		
9	9 CD- Tape	BLUETOOTH 9	9		
0	0 CD- Tape	HDMI - SAT 0	0		
DISC/DECK 1/2	Disc/ Deck 1/ 2	ANGLE INFO	Info / Angle		
DISC/DECK 1/2	Disc/ Deck 1/ 2	SHIFT + ANGLE INFO	Shift + Info / Angle		
MUTING	Muting	DIMMER MUTE	Mute / Dimmer		
- VOL	Vol -	VOL -	Vol -		
VOL +	Vol +	VOL +	Vol +		

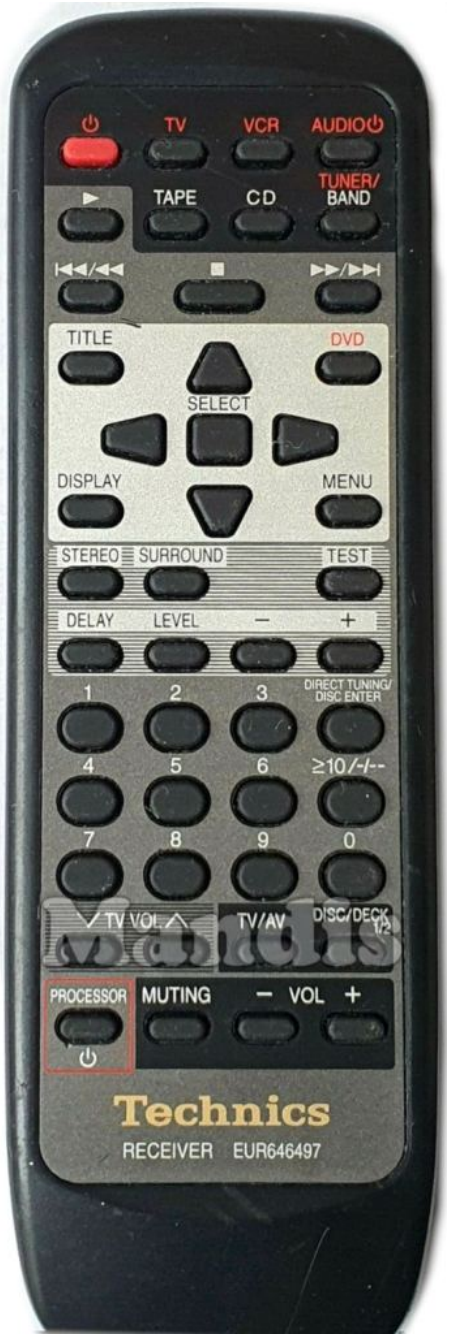

Original		Replacement	
Power VCR		SHIFT + Power	Shift + Power
Power Tuner/Band		Power	
TV		NETFLIX SEARCH	Red / Netflix / Search
VCR		PC FAV MARKER	Fav / Marker / PC
Play		SLOW ▶	Play / Slow
Tape		SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC
CD		YouTube REPEAT A-B	Yellow / YouTube / Repeat
Tuner/Band		Prime Video RANDOM	Blue / Prime Video / Random
I<</<<		TUNE- ◀◀	<< / Tune-
Stop		HOLD ■	Stop / Hold
>>/>>I		TUNE+ ▶▶	>> / Tune+
Up		Up	
DVD		APP REPEAT	Green / APP / Repeat
Left		Left	
SELECT		OK	OK
Right		Right	
DISPLAY		MEDIA DISPLAY	Display / Media

Original		Replacement	
Down		Down	
MENU		HOME MENU	Menu / Home
STEREO		LANG I/II AUDIO	Stereo	Audio / Lang I/II
SURROUND		SURROUND ⏏	Surround	Eject / Surround
TEST		GOTO TEXT	Test	Text / Goto
DELAY		RETURN BACK	Delay	Back / Return
LEVEL		LIST SMART	Level	Smart / List
–		CH PAGE –	-	CH- / Page-
+		+ CH PAGE	+	CH+ / Page+
1		SHIFT + TV 1	1 VCR	Shift + 1
1		TV 1	1 Tuner/Band	1
2		SHIFT + DVD 2	2 VCR	Shift + 2
2		DVD 2	2 Tuner/Band	2
3		SHIFT + CD-STB 3	3 VCR	Shift + 3
3		CD-STB 3	3 Tuner/Band	3
DIRECT TUNING/ DISC ENTER		TOP MENU D.MENU	Direct Tuning/Disc Ente	D.Menu / Top
4		SHIFT + VIDEO 4	4 VCR	Shift + 4

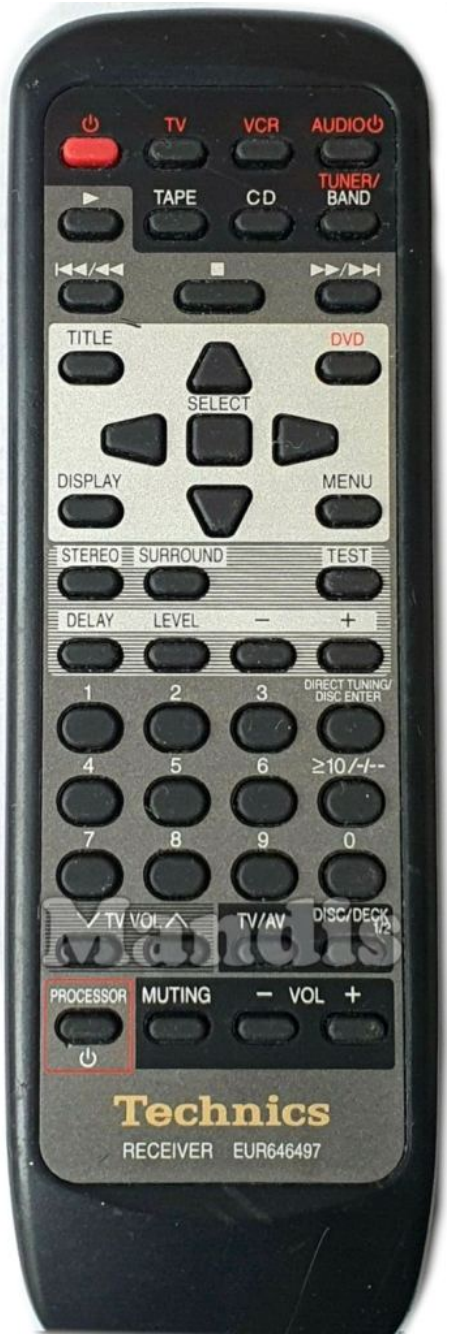

Original		Replacement	
4	4 Tuner / Band	VIDEO 4	4
5	5 VCR	SHIFT + TAPE 5	Shift + 5
5	5 Tuner / Band	TAPE 5	5
6	6 VCR	SHIFT + TUNER 6	Shift + 6
6	6 Tuner / Band	TUNER 6	6
≥10/-/--	>10/-/-- VCR	SHIFT + -/-- GUIDE EPG	Shift + Guide / EPG / -/--
≥10/-/--	>10/-/--	-/-- GUIDE EPG	Guide / EPG / -/--
7	7 VCR	SHIFT + AUX - HDD 7	Shift + 7
7	7 Tuner / Band	AUX - HDD 7	7
8	8 VCR	SHIFT + USB 8	Shift + 8
8	8 Tuner / Band	USB 8	8
9	9 VCR	SHIFT + BLUETOOTH 9	Shift + 9
9	9 Tuner / Band	BLUETOOTH 9	9
0	0 VCR	SHIFT + HDMI - SAT 0	Shift + 0
0	0 Tuner / Band	HDMI - SAT 0	0
DISC/DECK 1/2	Disc/Deck 1/2	ANGLE INFO	Info / Angle
MUTING	Muting	DIMMER MUTE	Mute / Dimmer

Original		Replacement	
VOL -	Vol -	VOL -	Vol -
VOL +	Vol +	VOL +	Vol +