Mandis shop

Samsung AH59-00134B

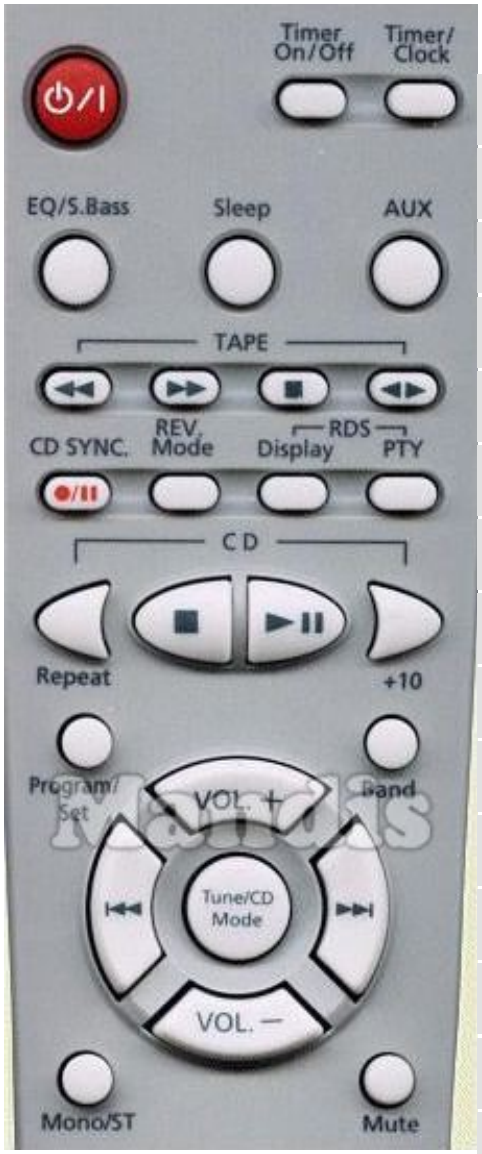


| Original | Replacement | Original | Replacement |
|---|---|---|---|
| POWER | Power | >>I CD, TUN UP | Last |
| PROGRAM/SET | MEDIA | PLAY/PAUSE CD | Play |
| MUTE | MUTE | MONO/ST | Audio |
| CD SYNC, REC | Rec | TIMER ON/OFF | V-FOR |
| BAND | VOD | << TAPE | Rewind |
| REPEAT | INFO | STOP CD | Stop |
| EQ/S.BASS | SRC | >> TAPE | Fast Forward |
| SLEEP | EXIT | <> TAPE | Pause |
| TUNE/CD Mode | P/C / FAV | REV MODE | Red (A) |
| I << CD, TUN | First | AUX | MENU |
| +10 | -/-- / EPG | | |
| DISPLAY RDS | TV/R | | |
| STOP TAPE | Yellow (C) | | |
| VOL+ | VOL + | | |
| TIMER/CLOCK | WIDE | | |
| PTY RDS | Subt. | | |
| VOL- | VOL - | | |

https://mandis.shop/en/Samsung/1036-823-replacement-remote-control-for-Samsung-AH59-00134B.htm