Mandis shop

RM-501

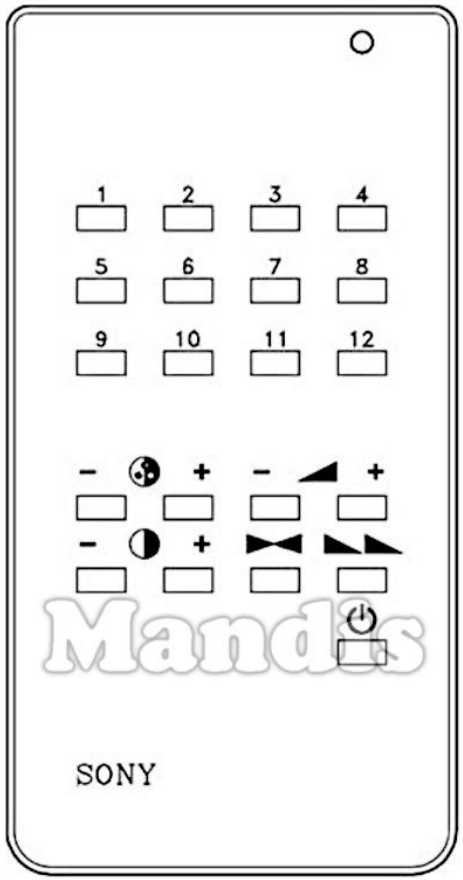

Original		Replacement	
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
10	10	GUIDE EPG	Guide / EPG / -/--
11	11	FAV MARKER	Fav / Marker / PC
12	12	0	0
Color-	Color-	TUNE-	<< / Tune-
Color+	Color+	TUNE+	>> / Tune+
Vol-	Vol-	VOL −	Vol-
Vol+	Vol+	+ VOL	Vol+
Contrast-	Contrast-	PRESET-	I<< / Preset-

Original		Replacement	
Contrast+	Contrast+	PRESET+	>>I / Preset+
Norm	Norm	CLEAR EXIT CANCEL	Exit / Cancel / Clear
Power	Power	Power	Power

https://mandisshop.ie/en/Sony/1066787-59180-replacement-remote-control-for-Sony-RM-501.html