Mandis shop

Yamaha VQ086200

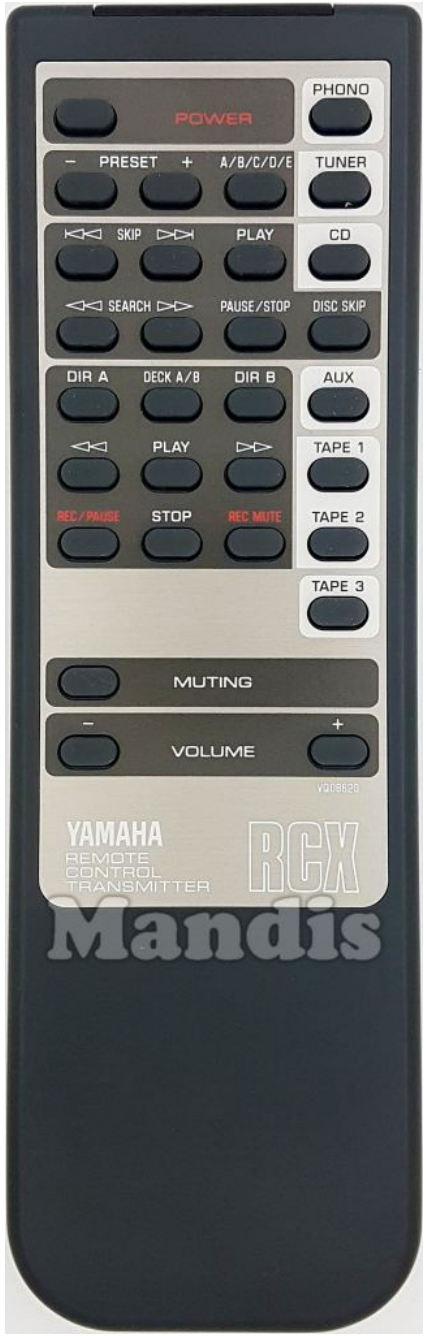

Original		Replacement	
POWER	Power	POWER	Power
PHONO	Phono	HOME SMART	Smart
TUNER	Tuner	OK	Ok
A/B/C/D/E	A/B/C/D/E	DISPLAY INFO	Info
PRESET +	Preset +	+ CH	Ch +
PRESET −	Preset -	CH −	Ch -
CD	CD	APP MEDIA	Media
PLAY	Play CD	PLAY MODE ▶	Play
SKIP ▷▷I	Skip >>I CD	▷▷I	>>I
I◁◁ SKIP	I << Skip CD	I◁◁	I <<
SEARCH ▷▷	Search >> CD	▷▷	>>
◁◁ SEARCH	<< Search CD	◁◁	<<
PAUSE/STOP	Pause/Stop CD	II	Pause
DISC SKIP	Disc Skip CD	RETURN BACK	Back
AUX	AUX	A	Red
TAPE 1	Tape 1	B	Green
TAPE 2	Tape 2	C	Yellow

Original		Replacement	
TAPE 3	Tape 3	D	Blue
DIR A	Dir A Tape	SETTINGS OPT	Options
DECK A/B	Deck A/B Tape	SOUND DUAL	Dual
DIR B	Dir B Tape	AD SUBT	Subt
◁◁	<< Tape	SHIFT + ◁◁	Shift + <<
▷▷	>> Tape	SHIFT + ▷▷	Shift + >>
PLAY	Play Tape	SHIFT + PLAY MODE ▶	Shift + Play
REC/PAUSE	Rec/Pause Tape	REC MODE ●	Rec
STOP	Stop Tape	■	Stop
REC MUTE	Rec Mute Tape	SEARCH TV/R	TV/R
VOLUME +	Vol +	+ VOL	Vol +
VOLUME −	Vol -	VOL −	Vol -
MUTING	Muting	MUTE	Mute

https://mandisshop.com/Yamaha-10742-197-replacement-remote-control-for-Yamaha-VQ086200.htm