Mandis shop

Yamaha RAS21

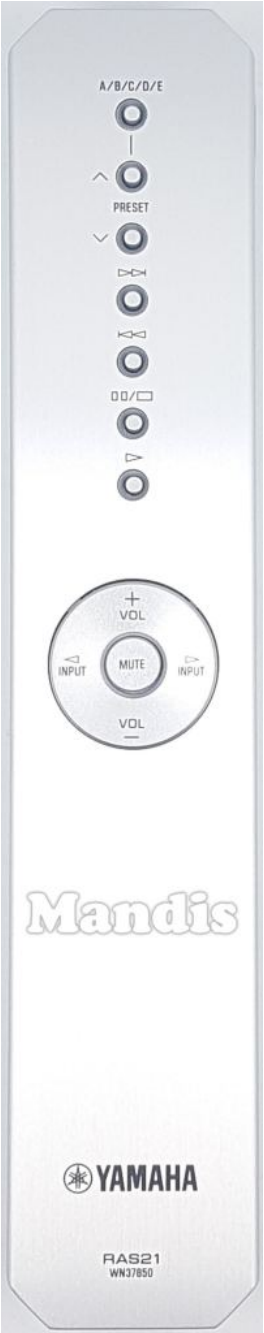

Original		Replacement	
A/B/C/D/E	A/B/C/D/E	HOME SMART	Smart
PRESET	Preset Up	+ CH	Ch +
PRESET	Preset Down	CH −	Ch -
>>I	>>I	>>I	>>I
I <<	I <<	I <<	I <<
Stop	Stop	Stop	Stop
Pause	Pause	Pause	Pause
Play	Play	PLAY MODE	Play
+ VOL	Vol +	+ VOL	Vol +
VOL −	Vol -	VOL −	Vol -
MUTE	Mute	MUTE	Mute
INPUT	Input >		Right
INPUT	< Input		Left

Original	Replacement

https://mandisshop.com/Yamaha/10253631-replacement-remote-control-for-Yamaha-RAS21-WN37850.htm